




Welcome to your DISH Pay setup guide! After turning on your device, tap **START** to begin the setup.

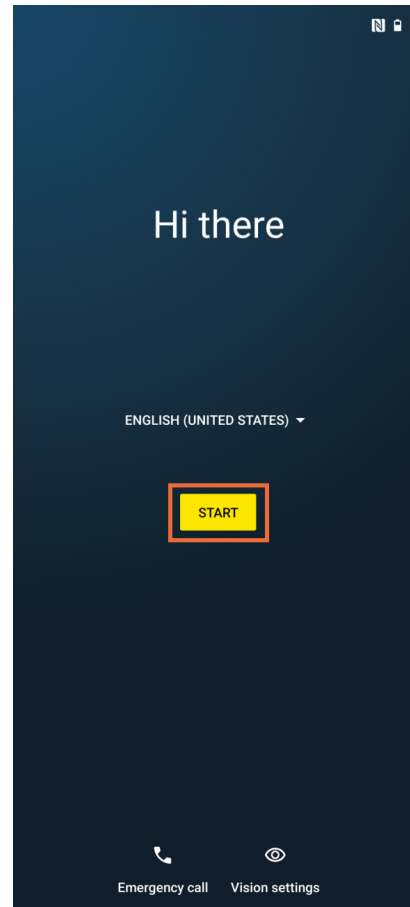


When asked to connect to a mobile network, tap **Skip**.






Next, choose your preferred **Wi-Fi network**.

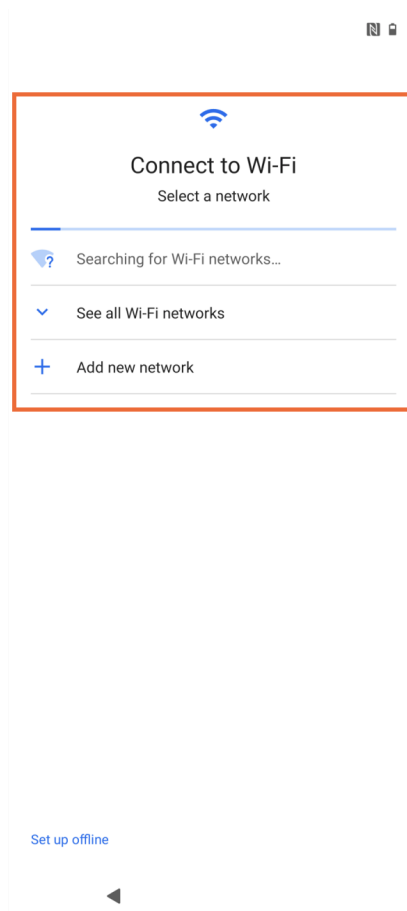




When asked about Privacy & Software updates, choose your preference and tap **Accept & continue**.

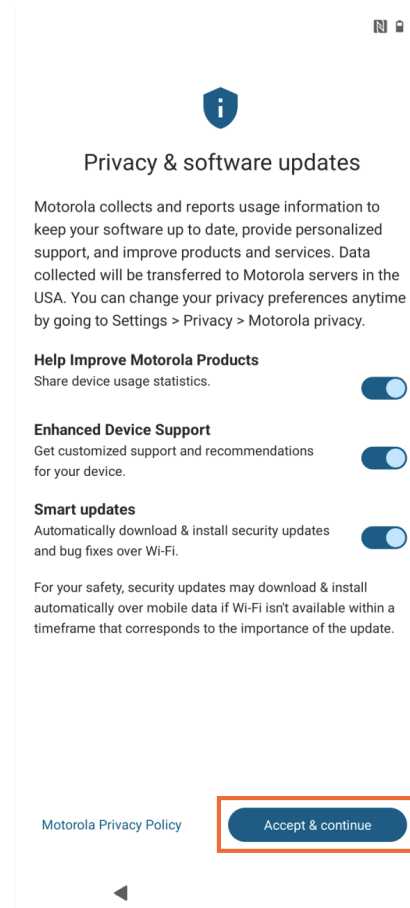


 Pick the Google services that you want to use and tap **More**.

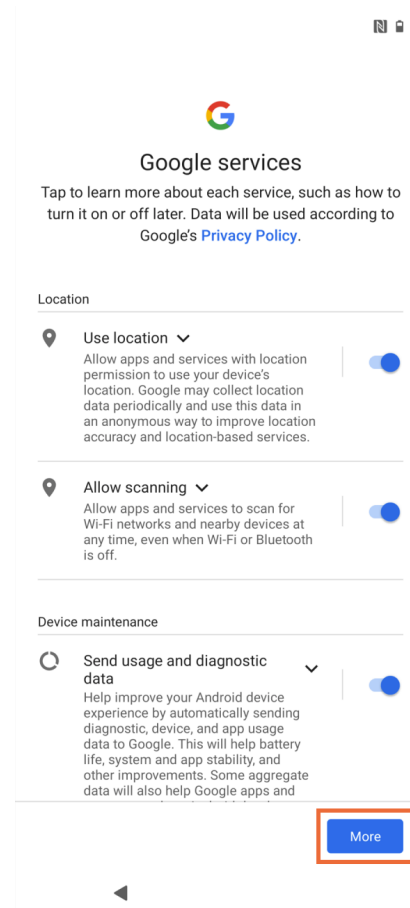




Afterward, scroll down and tap **Accept**.

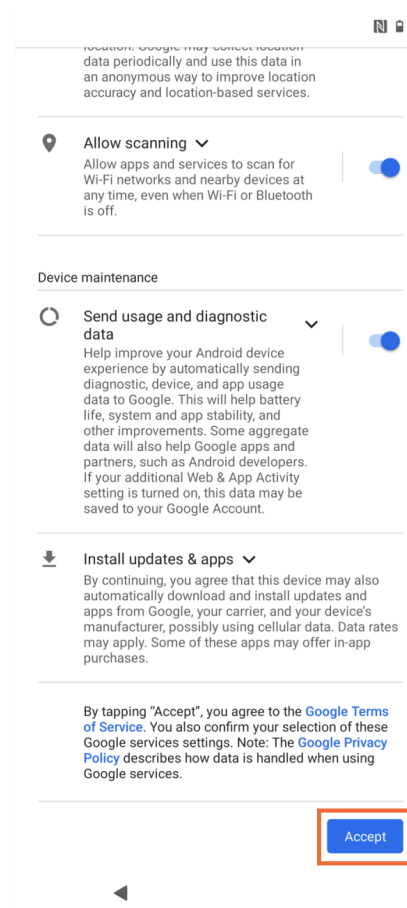





You will now need to setup a pin for your device. This is mandatory to use the DISH Pay App!

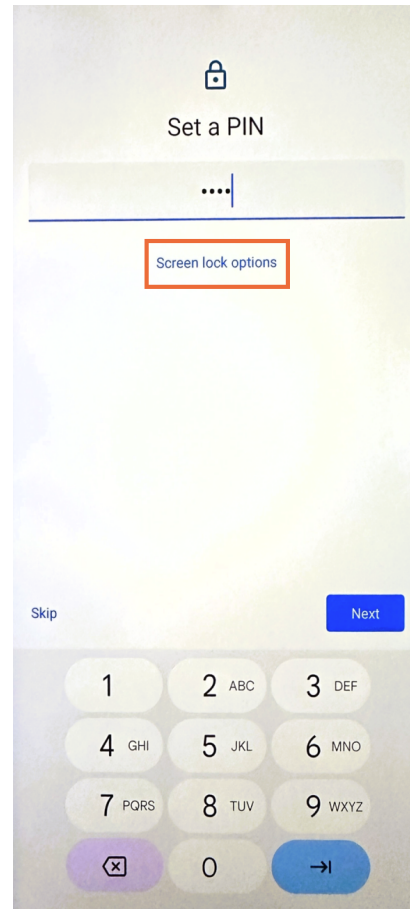

You can either set up a **Pattern**, **PIN** or a **Password** for your device. We will go for a PIN.

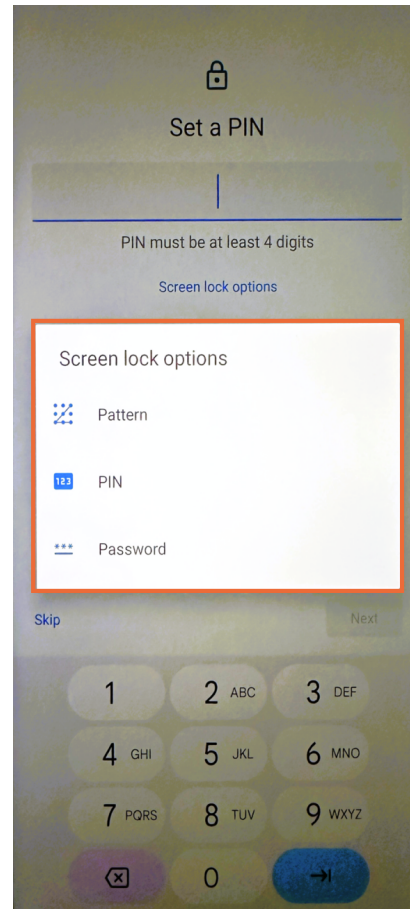

 You will be asked to re-enter the **PIN** you chose. Do so and tap **confirm**.

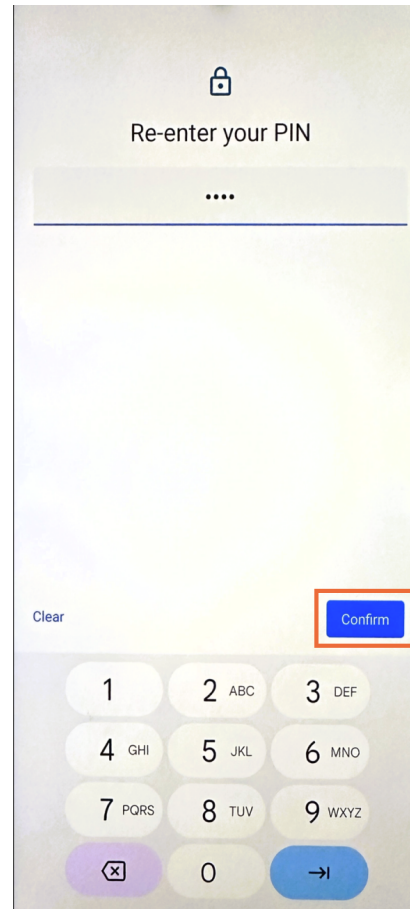



Now, you will need to sign in with your Google Account. Type in your account information and tap **Next**. If you don't already have a Google Account, please follow the instructions provided below on how to create a Google account.

Google

Sign in

with your Google Account.

[Learn more about using your account](#)

Email or phone

Couldn't find your Google Account

If you've signed in to Google products, like YouTube, try again with that email

[Forgot email?](#)

Create account


- For my personal use
- For my child
- For work or my business

Skip

Next



Click

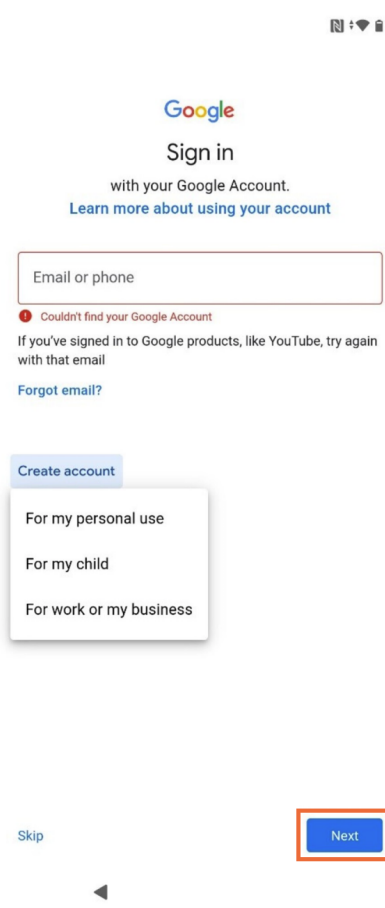

Google

Sign in

with your Google Account.

[Learn more about using your account](#)

Email or phone

Couldn't find your Google Account

If you've signed in to Google products, like YouTube, try again with that email

[Forgot email?](#)

Create account


For my personal use


For my child

For work or my business


[Skip](#)

Next

 Select the Express (1 step) setup and confirm by tapping **Next**.

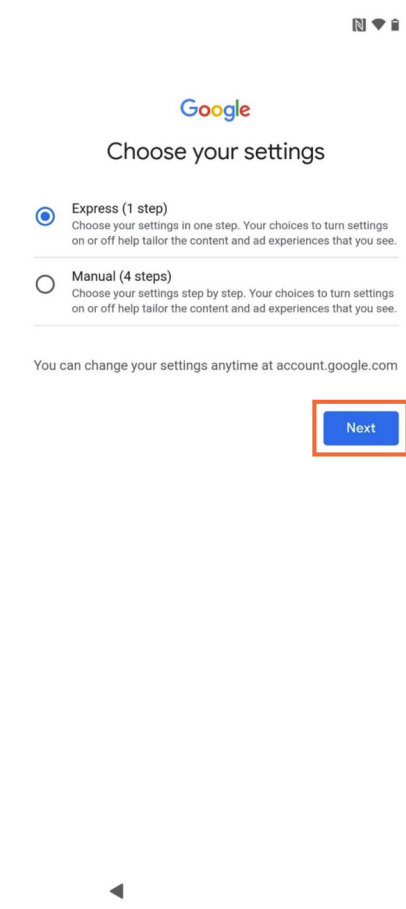


 Read through the settings description and **scroll down**.

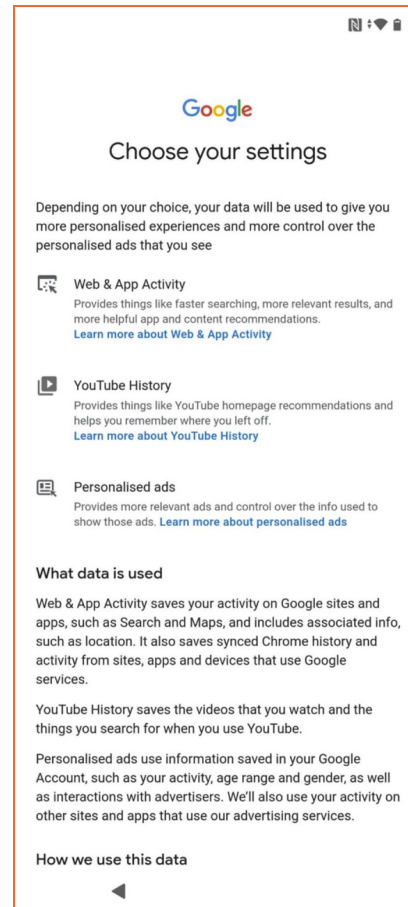




Tap **Confirm** to move on.

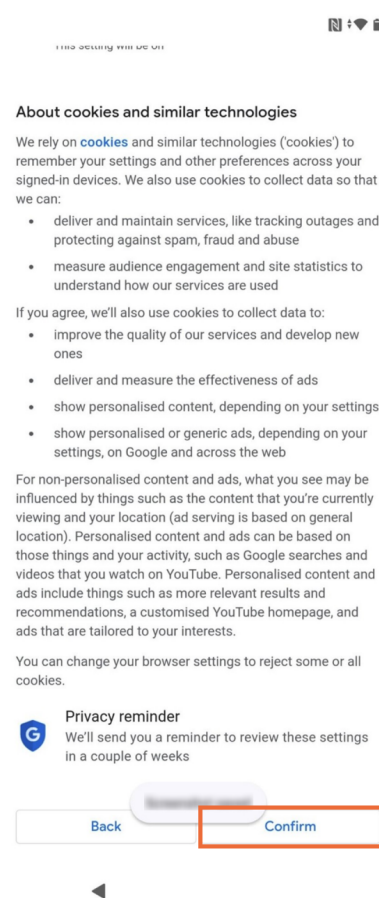




Read the Privacy and Terms and scroll down.

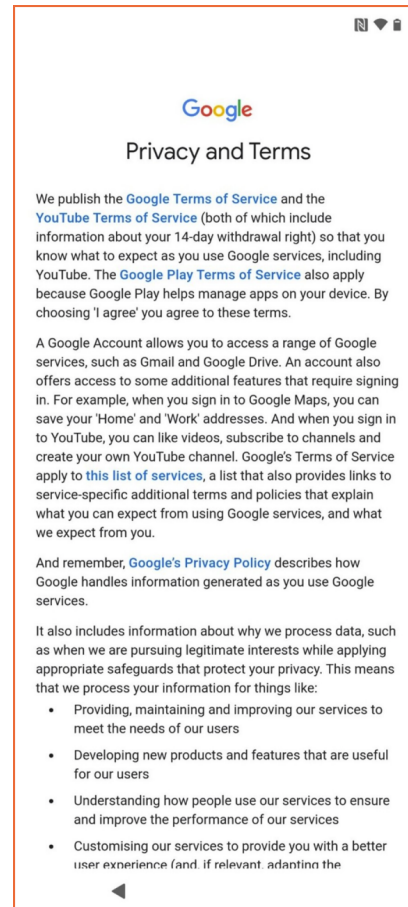

Tap **I agree** to confirm that you have read the information.




It also includes information about why we process data, such as when we are pursuing legitimate interests while applying appropriate safeguards that protect your privacy. This means that we process your information for things like:

- Providing, maintaining and improving our services to meet the needs of our users
- Developing new products and features that are useful for our users
- Understanding how people use our services to ensure and improve the performance of our services
- Customising our services to provide you with a better user experience (and, if relevant, adapting the experience to be age-appropriate)
- Marketing to inform users about our services
- Providing advertising, which allows us to offer many of our services at no cost (and when ads are personalised, we ask for your consent)
- Detecting, preventing or otherwise addressing fraud, abuse, security or technical issues with our services
- Protecting against harm to the rights, property or safety of Google, our users or the public as required or permitted by law, including disclosing information to government authorities
- Performing research that improves our services for our users and benefits the public
- Fulfilling obligations to our partners, like developers and rights holders
- Enforcing legal claims, including investigation of potential violations of applicable Terms of Service

You can visit your Google Account (account.google.com) to take a Privacy Checkup or to adjust your privacy controls.


Have questions? [Contact us](#)

[Don't create the account](#)
[I agree](#)






Choose the Google services you would like to use and tap **Accept** to confirm your choice.

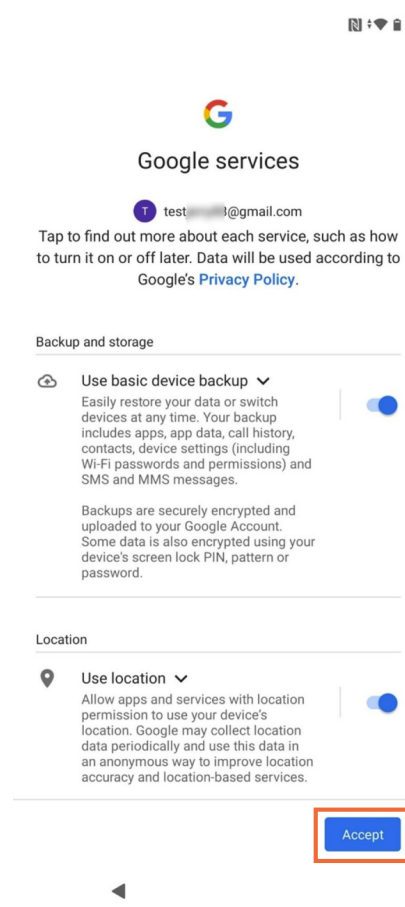




Again, choose the services you would like to use and tap **Accept** to confirm your choice.

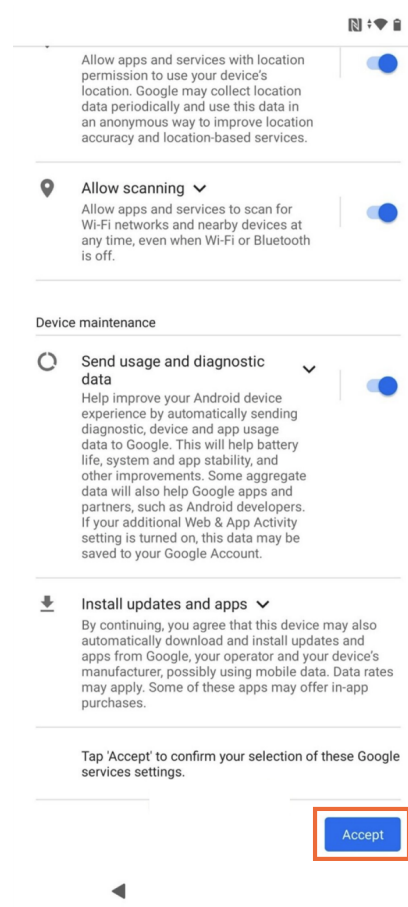




When asked for the Unlock with your fingerprint, tap **Skip**.

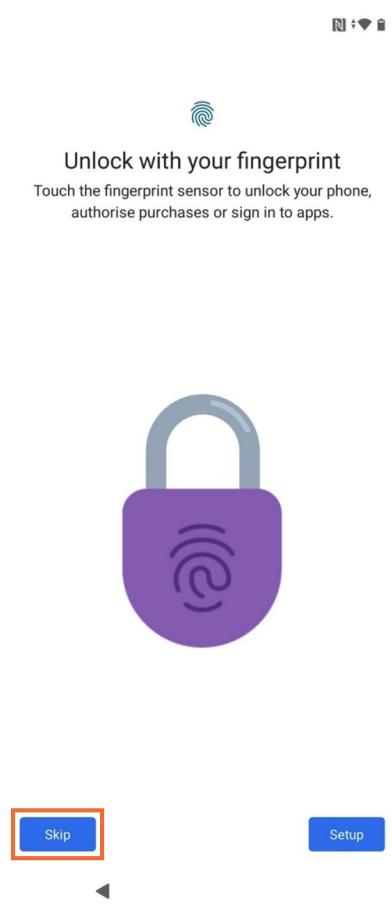



Just like before, when asked for the Unlock with your face, tap **No, thanks** to continue.

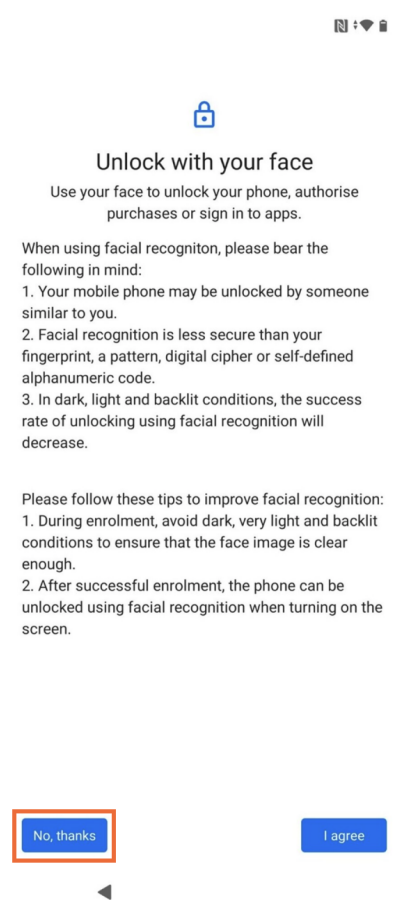




To completely set up the device, tap **Continue**.





When asked for allowing the assistant to work without unlocking your device, tap **Skip**.

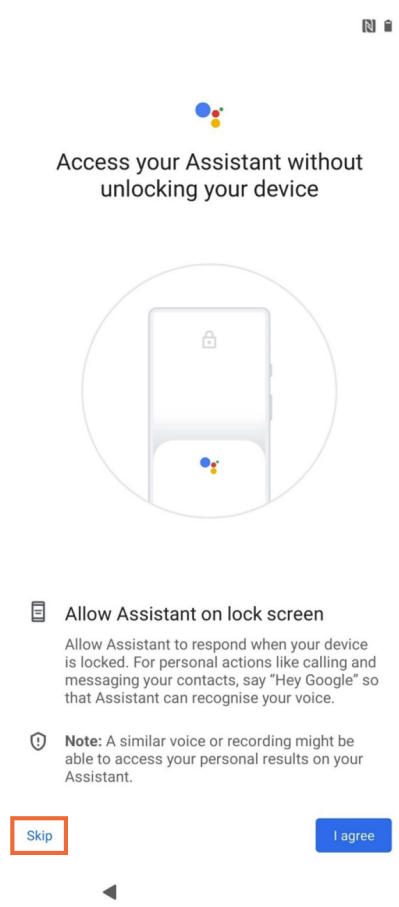




When asked to set up Google Pay, tap **Skip** as well.






Tap **NEXT** when the information regarding YouTube Music app shows up.

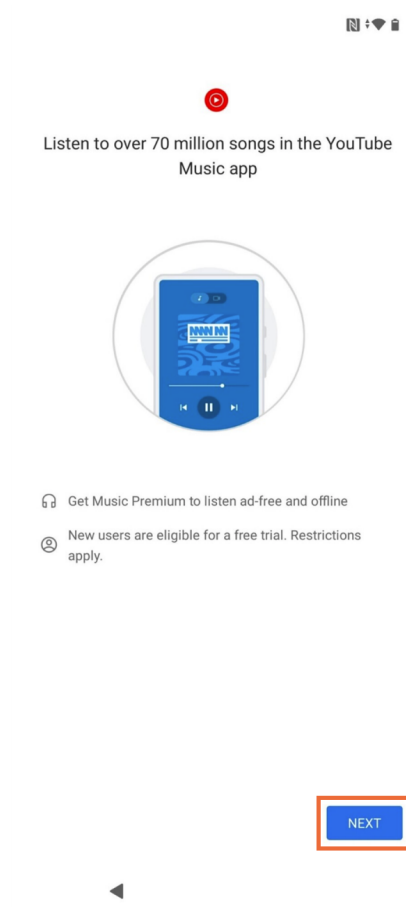




When asked to register to the Google newsletter, tap **Not now** and move on to the next step.

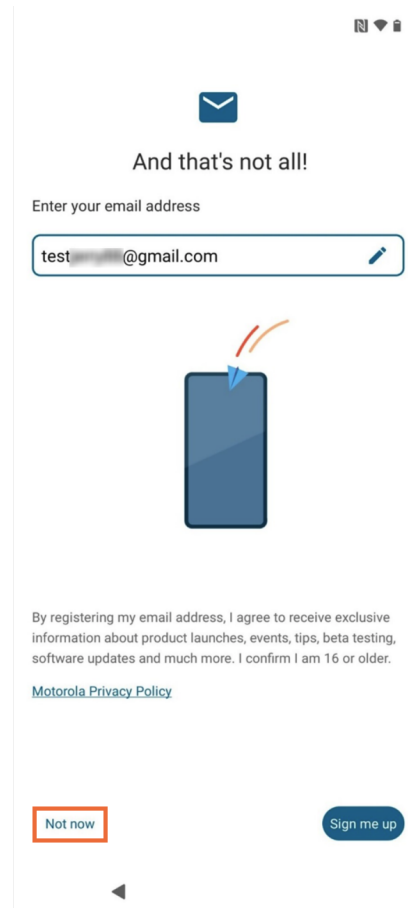


As navigation style, choose **Buttons** and tap **Next** to move on.

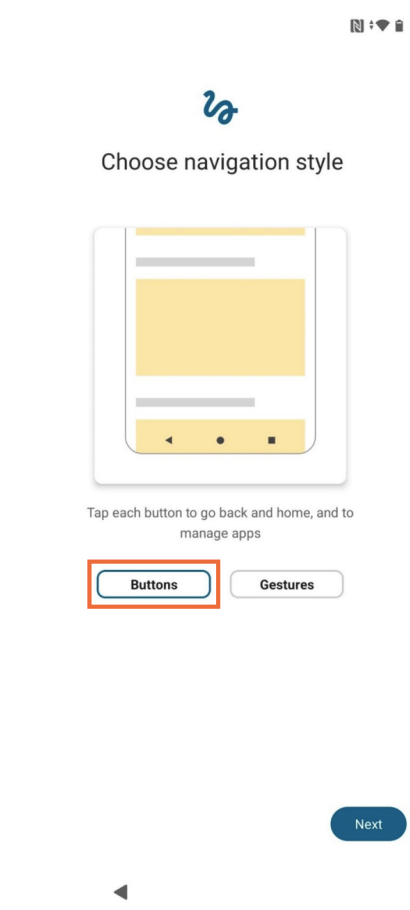




When the setup asks you if you want to have recommended apps automatically downloaded, tap **No, thanks** and continue.

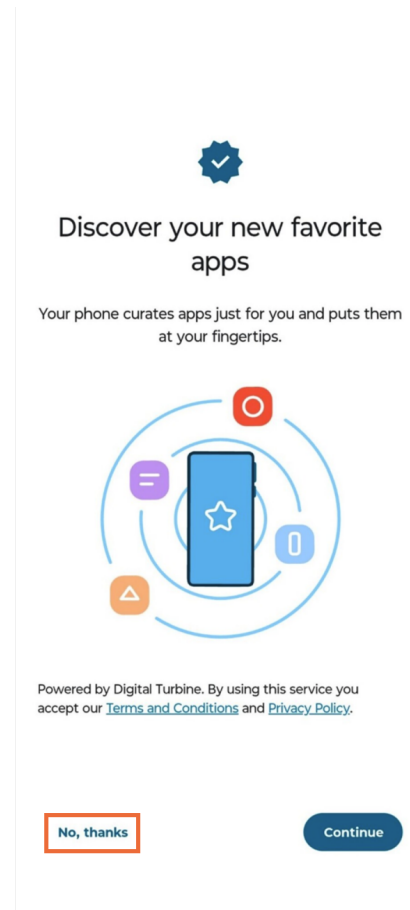




Now that the setup is completed, go into the Google Play Store and search for the **DISH Pay App**.

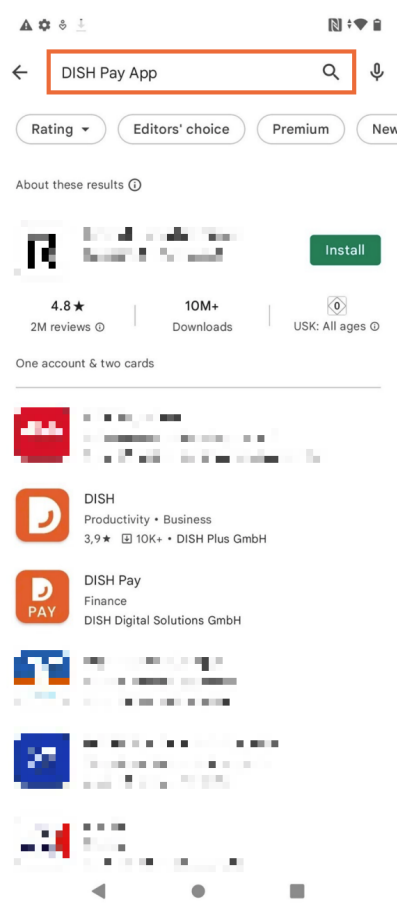




Tap on the DISH Pay app and tap **Install** next.

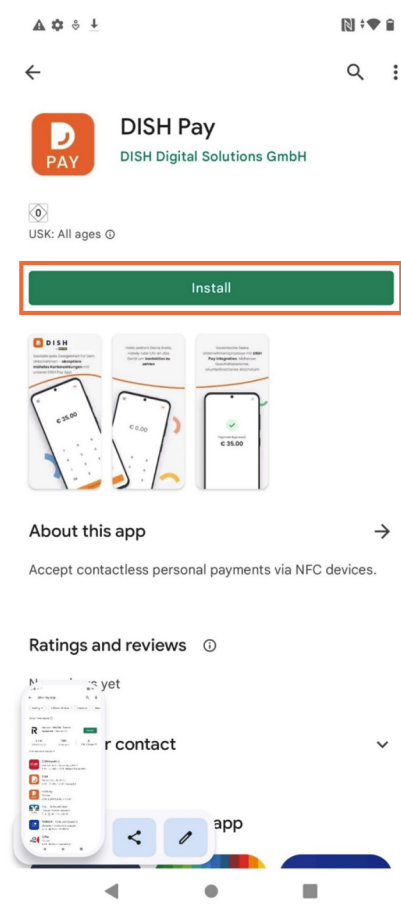




To download the app, you will be asked to complete your account setup.

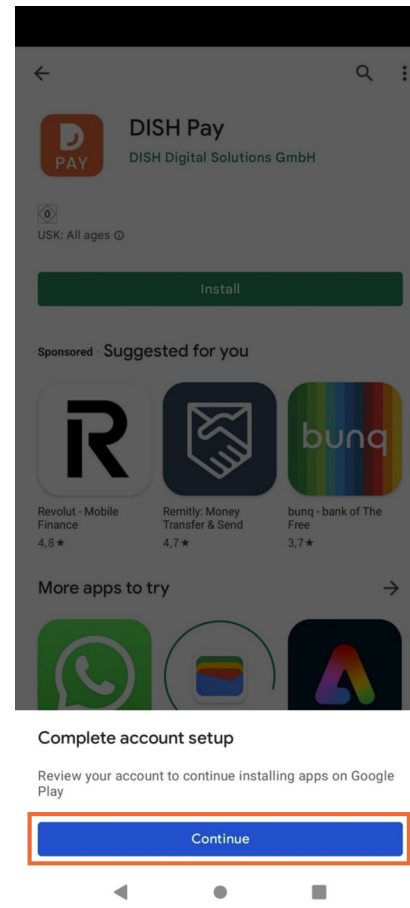



Add a payment method to complete your account.

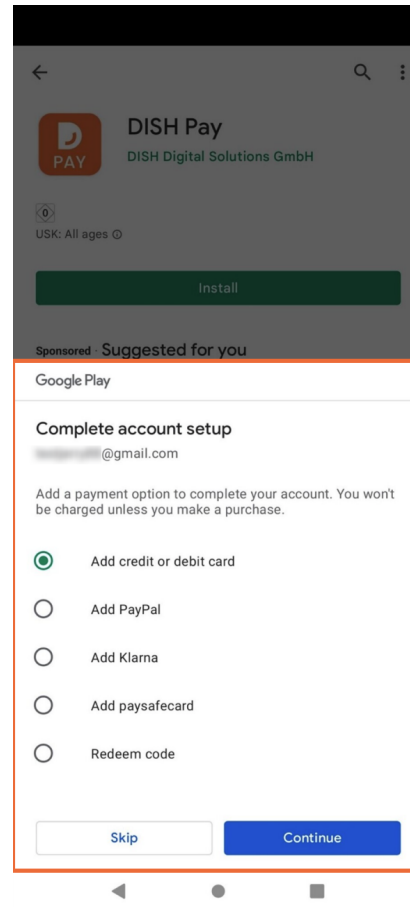

Once you have installed the DISH Pay app, open it, and tap **Log in**.





DISH
by METRO

Moto G14 device setup with Google account



Enter your email or phone connected to DISH account and put in your password. These are the same account details used to access your dish.co account.

Cancel dev.sso.app.hd.digital AA C

Sign-in to DISH

Please sign-in to your Dish account using your Mobile number or Email.

Mobile number Email

q w e r t y u i o p
a s d f g h j k l
z x c v b n m
123 space return



That is it, you are done! You have successfully set up your brand-new DISH Pay device!





Scan to go to the interactive player