

 


Once you have turned on your device, select your preferred language and tap Start to continue.

Hi there

 English (United States)

 Vision settings





Connect to Wi-Fi by selecting your network from the list, then enter the password if prompted and tap Connect. **Wi-Fi is mandatory to onboard the DISH Pay Now device**



Connect to Wi-Fi

Select a network

 Network 1

 Network 2

 Network 3

 Network 4

[Set up offline](#)

- Don't copy apps and data, as this is not needed for your DISH Pay Now device.



Copy apps & data

You can choose to transfer your apps, photos, contacts, Google Account, and more




Don't copy

Next





Sign in to your Google Account to personalize your device, then tap **Next**. Choose either **For my personal use** or **For work or my business**.

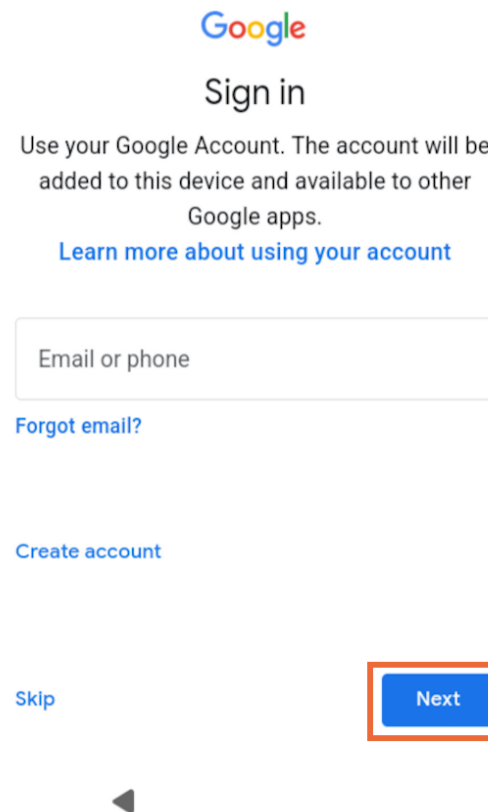

Google

Sign in

Use your Google Account. The account will be added to this device and available to other Google apps.

[Learn more about using your account](#)

[Forgot email?](#)

[Create account](#)

[Skip](#) [Next](#)

◀

Enter your Google Account password and tap **Next** to continue.

6:20 PM

Google

Hi User


example@gmail.com

Enter your password


Next




Please **ONLY choose the Google Chrome browser** in order to receive a smooth user experience with the device.

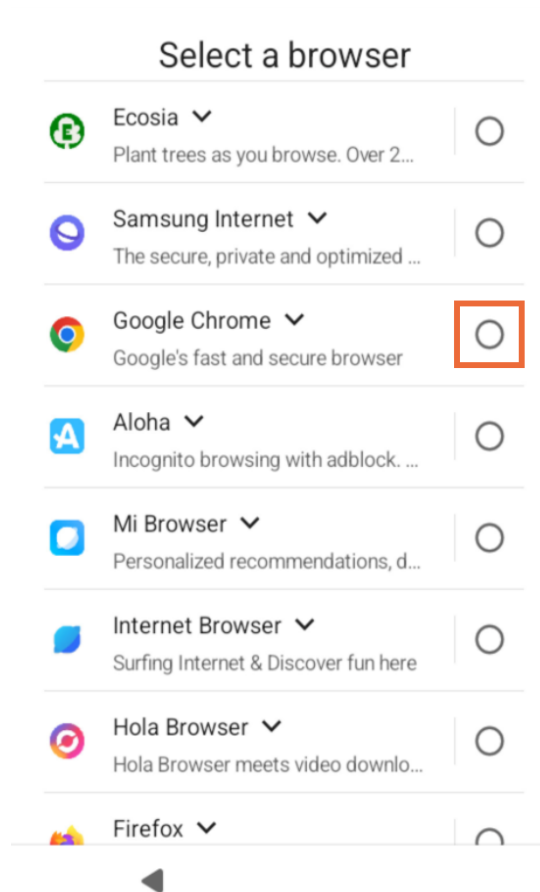

- 📌 Set up a secure PIN for the device by entering a 4- to 6-digit number, then tap **Next**.

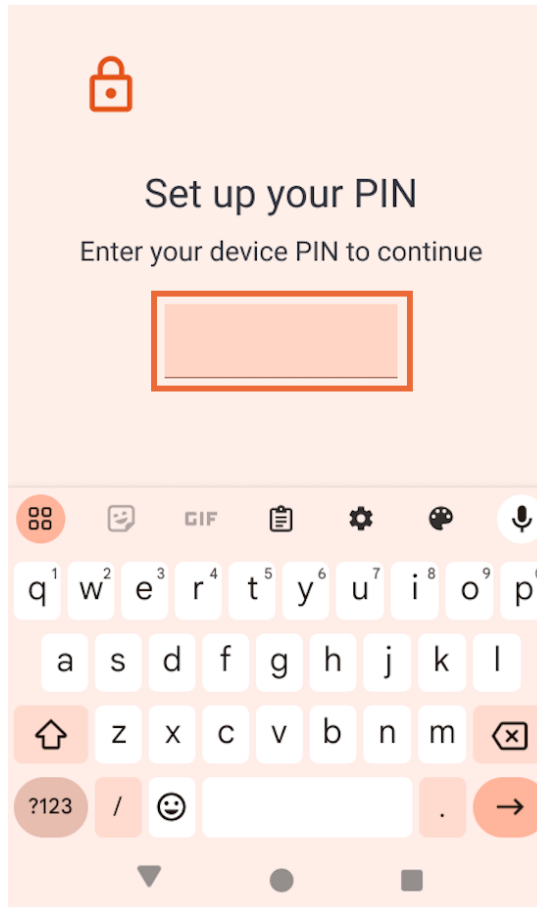


 **Skip** the Google Pay for contactless payments, as this is not needed.

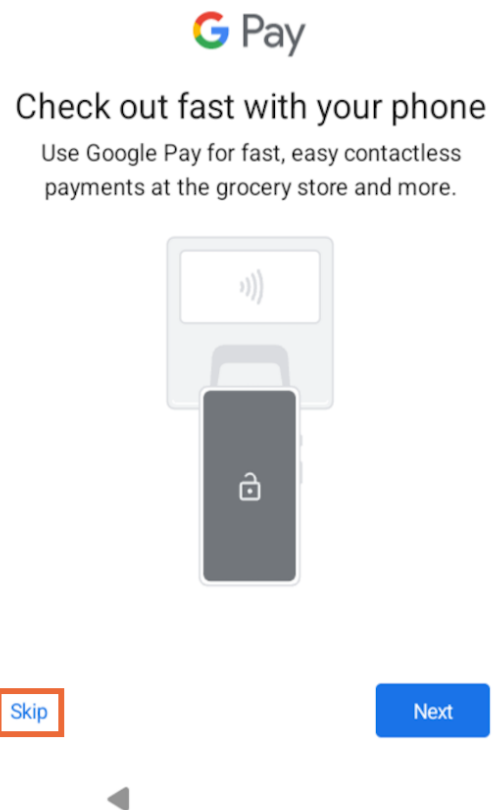




You will now find the DISH Pay Launcher on the home screen of your device. Tap the launcher to continue.

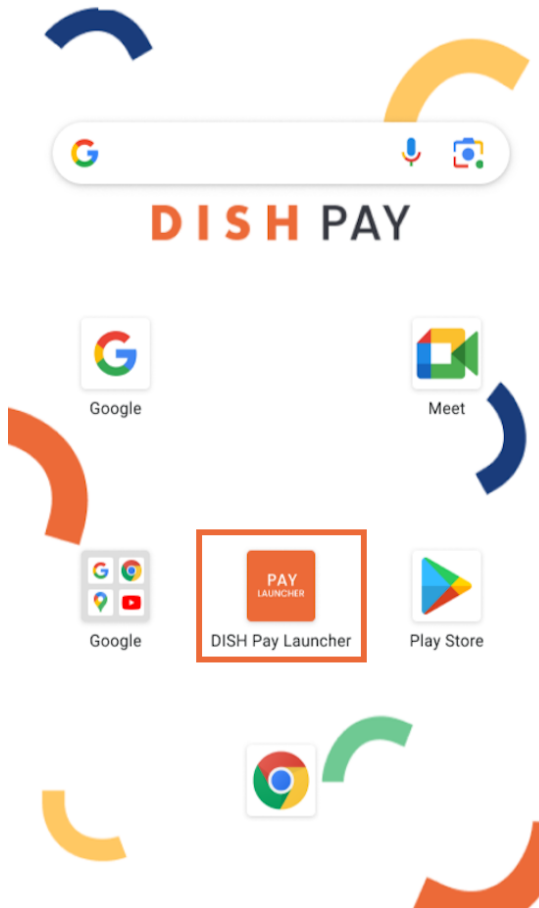

- Set DISH Pay Launcher as your default home app.

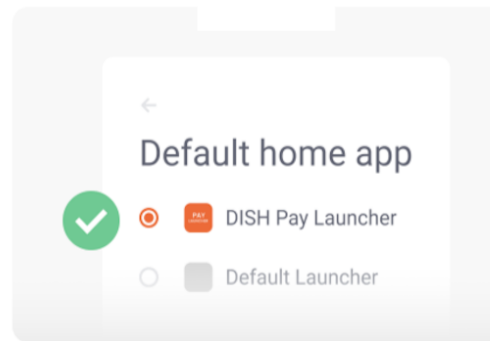

Set DISH Pay Launcher as Your Default Home App

 
This ensures you have quick and easy access to the Dish Pay app, please select Dish Pay Launcher as your default home app when prompted by the system.

Next

 Select the DISH Pay Launcher from the list and tap **Next**.



Default home app




☐  Other Launcher



Apps, often called launchers, that replace the Home screens on your Android device and give you access to the contents and features of your device

- Once set, the DISH Pay Launcher home screen will appear with a central DISH Pay icon.

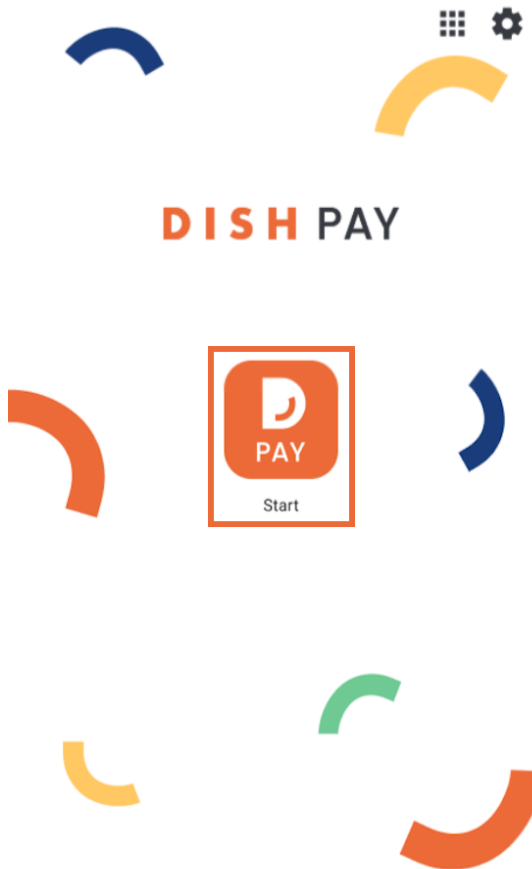



Sign in to the DISH Pay App using your DISH Account credentials that you have already created in step 1 of the Activate your account flow.

v1.4.8.34

DISH PAY

Powered by METRO

Log in

Don't have an account?

[Imprint](#)

[Privacy policy](#)




Please choose a device name.

Please setup a device name

This device name will be displayed in your DISH Pay Platform account to differentiate between devices.

username's phone

Continue

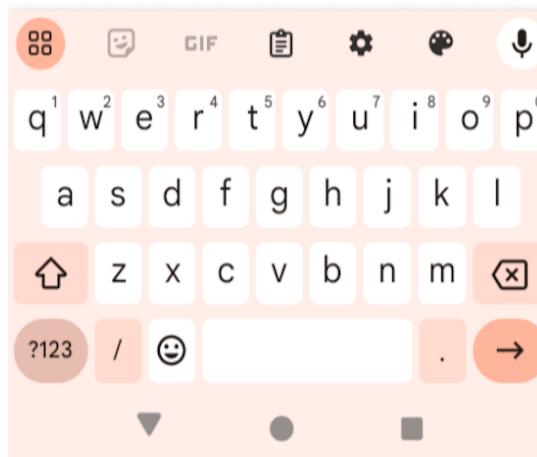



Scan to go to the interactive player