




-  Starting at the **Hi there** screen, select your preferred language and tap **Start** to continue.

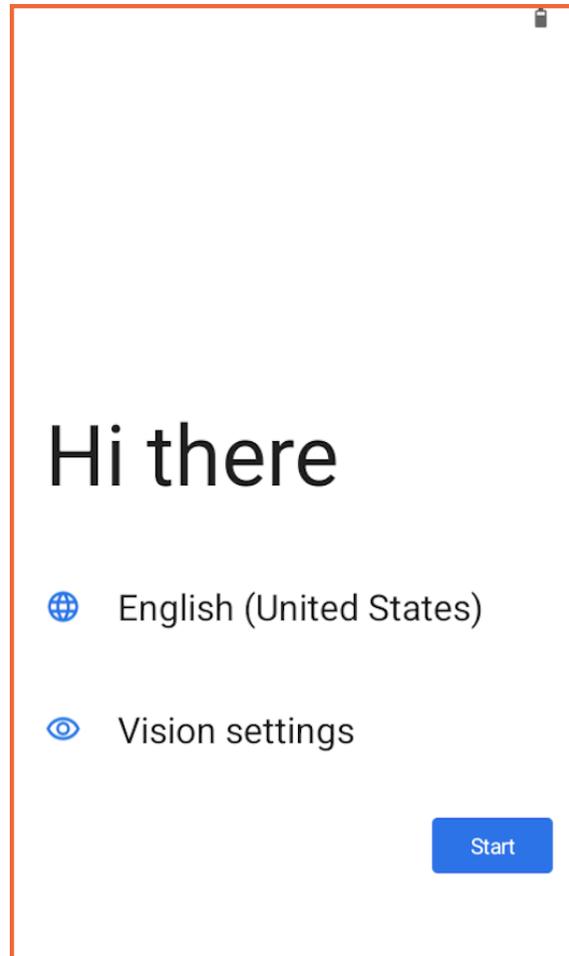


- 1 Connect to Wi-Fi by selecting your network from the list, then enter the password if prompted and tap **Connect**.

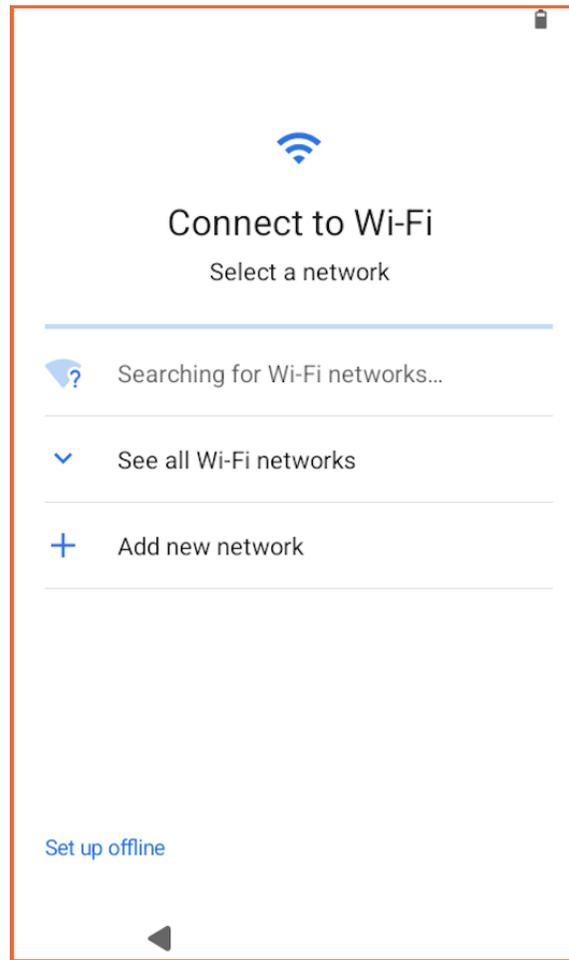

- 1 Sign in to your Google Account to personalize your device, then tap Next. Choose either **For my personal use** or **For work or my business**.

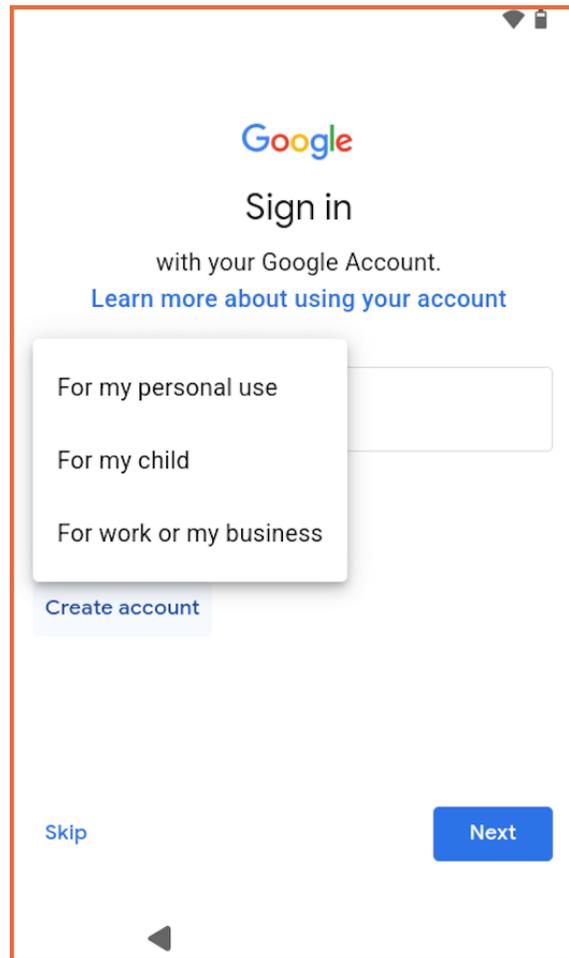


- Enter your Google account password and tap **Next** to continue.

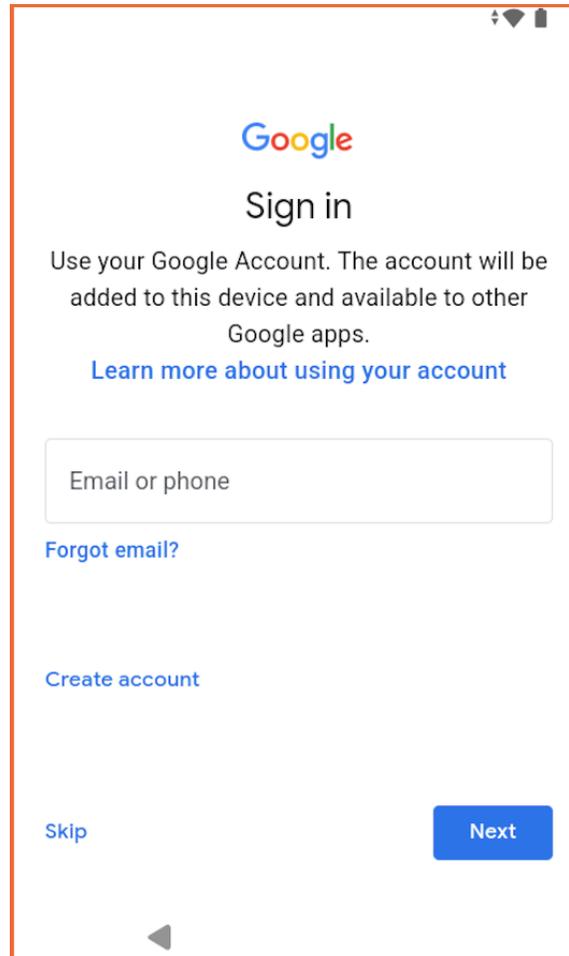





We recommend you to use the **Google Chrome** browser, since the DISH Pay Dashboard is optimised for Chrome.

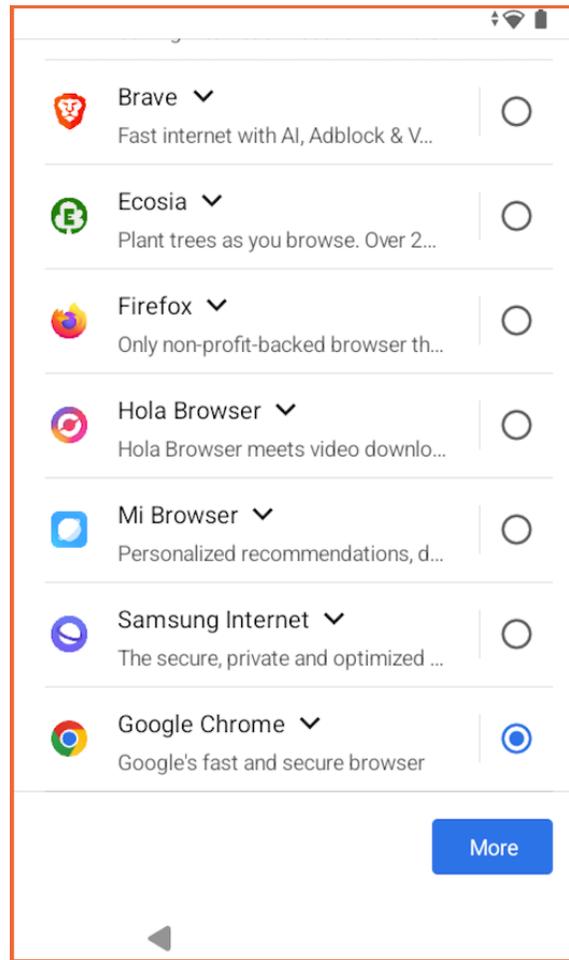


- 1 Set up a secure PIN for the device by entering a 4- to 6-digit number, then tap **Next**.

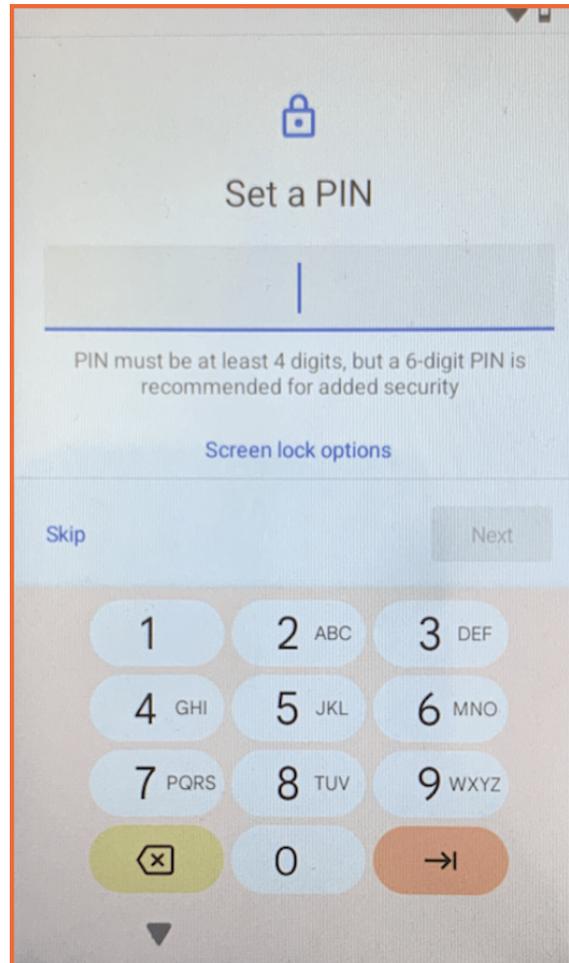


- Choose not to use Google Pay for contactless payments by tapping **Skip**.

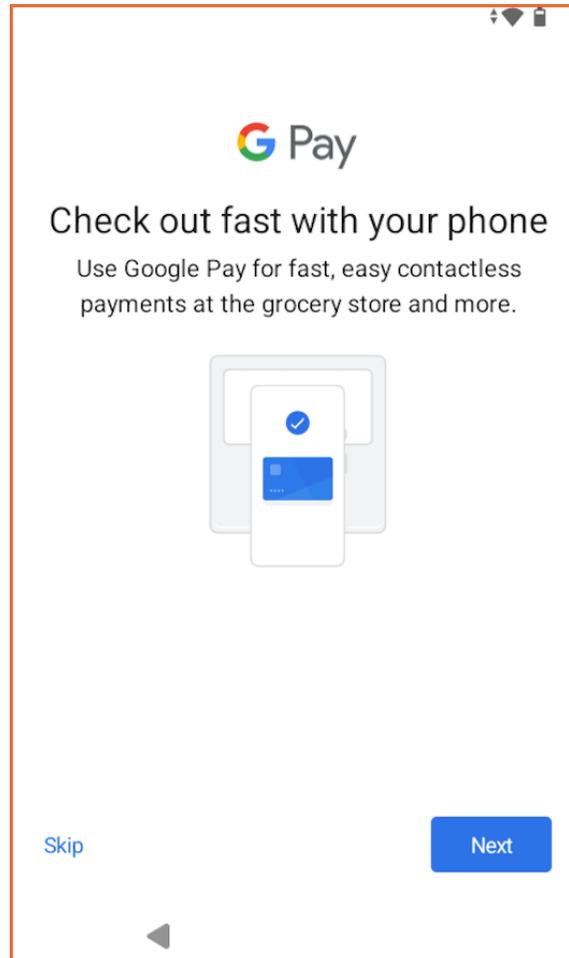


- 1 You will now find the DISH Pay launcher on the home screen of your device. Tap the **launcher** to continue.

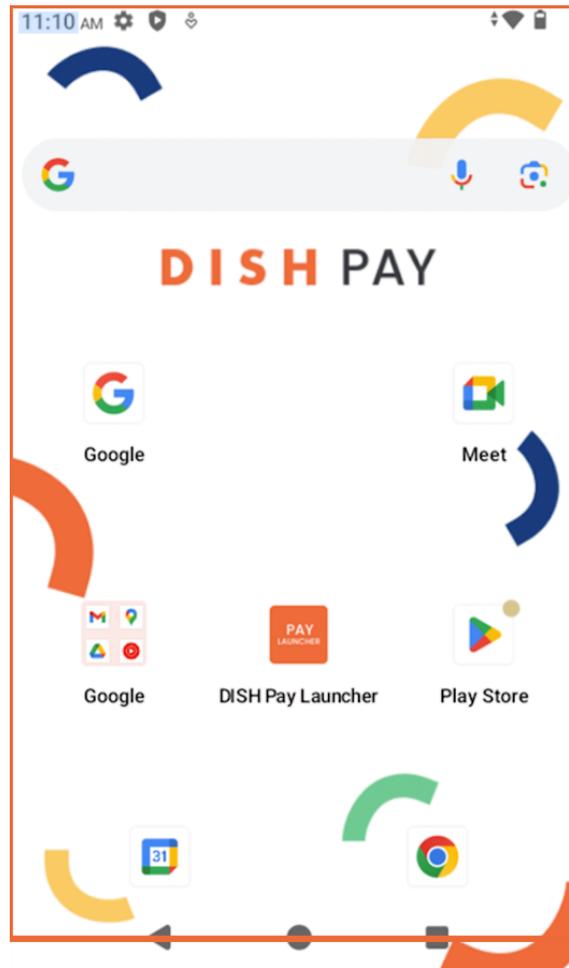


- Set DISH Pay Launcher as the default home app by selecting it from the list and tap **Next**.

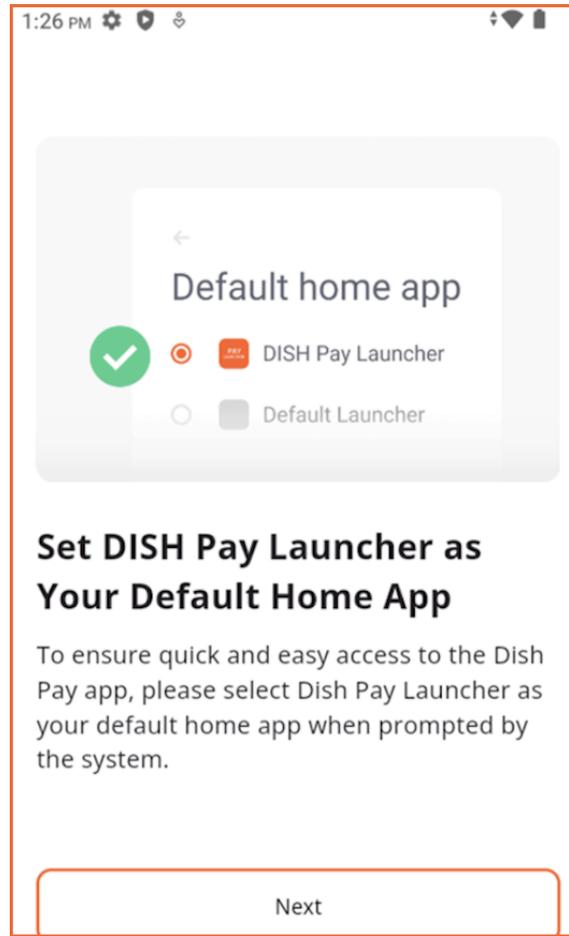


- Once set, the DISH Pay Launcher home screen will appear with a central DISH Pay icon.

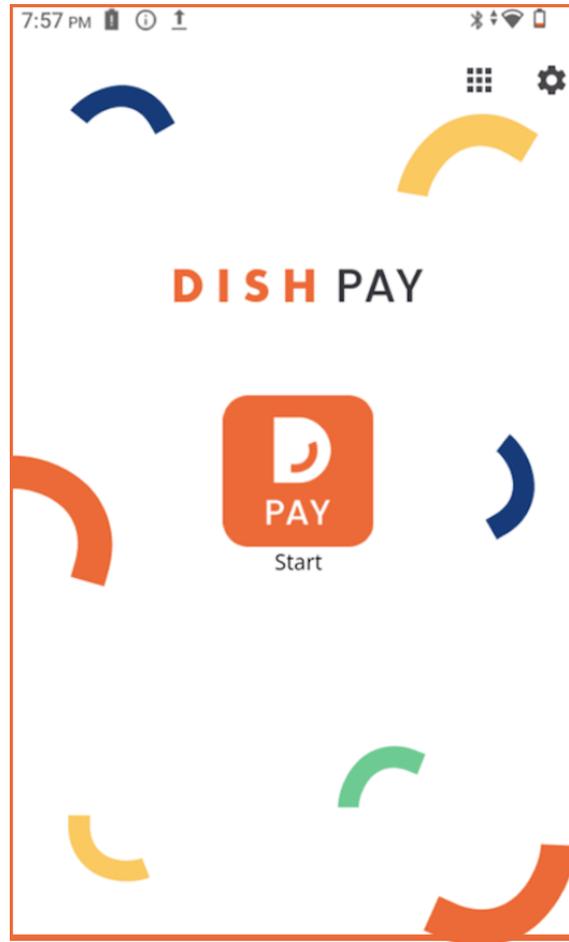

- Once you pressed, log in, sign in to the DISH app using your mobile number or email, then enter your password and tap **Remember me** if desired.

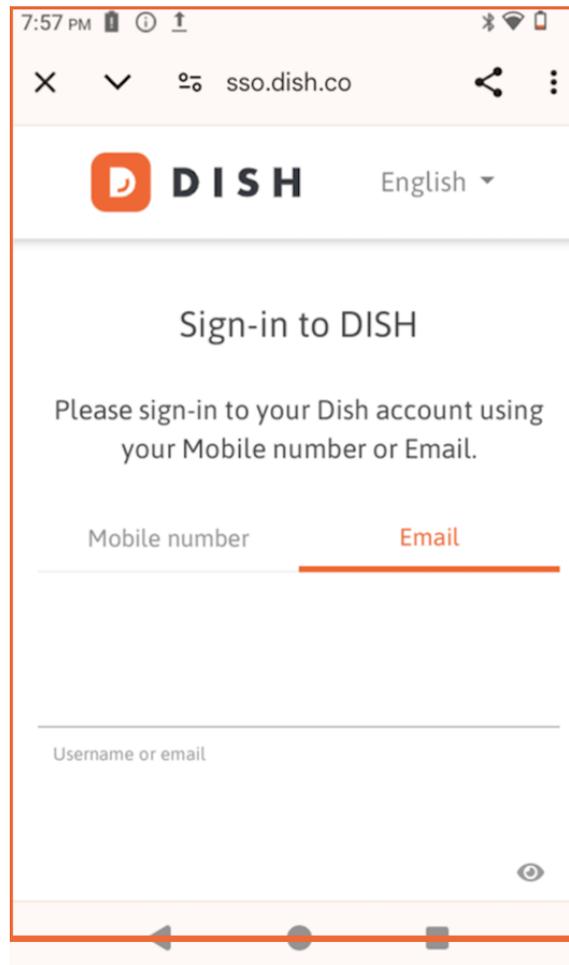

- Now that the setup is complete, enter an amount to process a transaction, tap Charge, and follow the on-screen instructions to complete the payment.

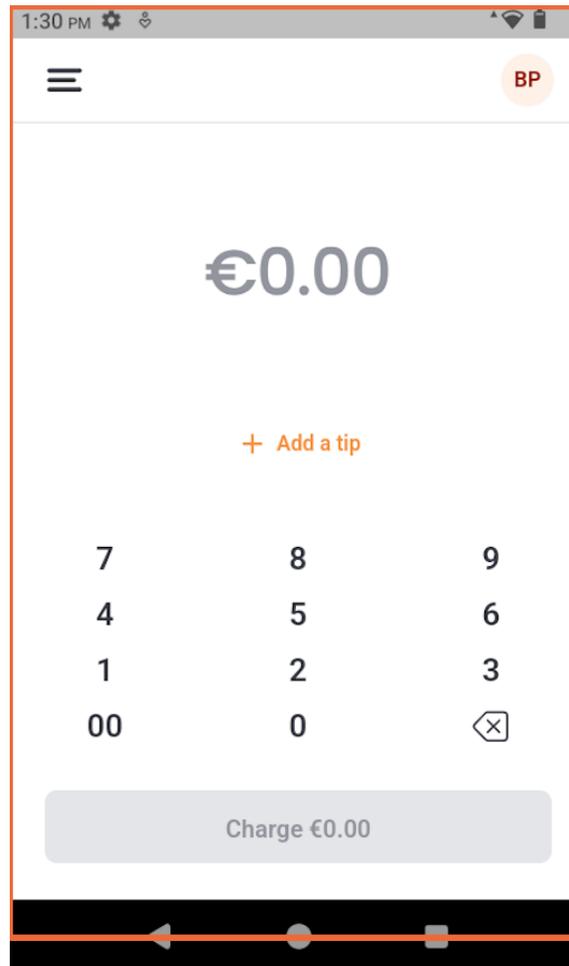



Scan to go to the interactive player